

General notes

The operating steps described here apply for telephones without automatic line access. For telephones with automatic line access, you must press the asterisk key to make as internal call or to use any of the programming functions set out here.

Some terminal devices use their own special procedures for the functions described. Refer to the operating instructions for the telephones being used for detailed information.

Safety notes

Mind the storage and operation temperatures for the device listed in the technical specifications.

Only connect the device when the permissible ambient operating temperature has been reached.

Please note that condensation on or in the unit must be prevented when moving from cold to warm surroundings. Only remove the unit from the package when the permissible ambient operating temperature has been reached.

You should not make calls or connect or disconnect any lines during thunderstorms.

Only attach the connecting cords at the connections provided.

Make sure phone cables are installed in a safe manner to prevent tripping.

Avoid the following:

Direct sunlight
Sources of heat (for example radiators)

Electronic devices (for example stereo components, office equipment or microwave devices)

Ingress of moisture or liquids

Aggressive fluids or vapors

Dusty environment

Do not use the unit in excessively humid rooms or hazardous locations.



Only open those sections of the device specified in the assembly / operating instructions.

Do not touch plug connectors with pointed, metal, or moist objects.

If you do not permanently mount the device or any accessories, be sure to place it/them on a non-slip surface.

When required, clean the unit with a slightly moistened cloth.

Only use approved accessories.

Only terminals with SELV and/or which comply with ETS 300047 may be connected to the unit. This regulation is fulfilled when approved terminal devices are used as intended.

Plug-in power supply

Use only approved power plug-in units (DSA-0101F-05 UP or L15 D52 AB DDLA-WO).

Do not use power plug-in units with visible defects or damage (fissures, cracks, etc.)

Declaration of conformity and CE mark

This device meets the requirements of the following EC directive R&TTE 1999/5/EG:



»Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity«.

You can also request this EC declaration of conformity at the following Internet URL: <http://www.funkwerk-ec.com>.




The waste container symbol with the "X" through it on the device indicates that the device must be disposed of separately from normal domestic waste at an appropriate waste disposal facility at the end of its useful service life.

© 2007 Funkwerk Enterprise Communications GmbH - All rights reserved.

Reprinting of this document, even excerpts, is permitted only with the express consent of the publisher and with precise source information, regardless of the media used (mechanical or electronic).

Function descriptions included in this documentation which refer to software products of other manufacturers are based on the software used and valid at the date the documentation was prepared or published. The product and company names used in this documentation may be protected by trademarks.

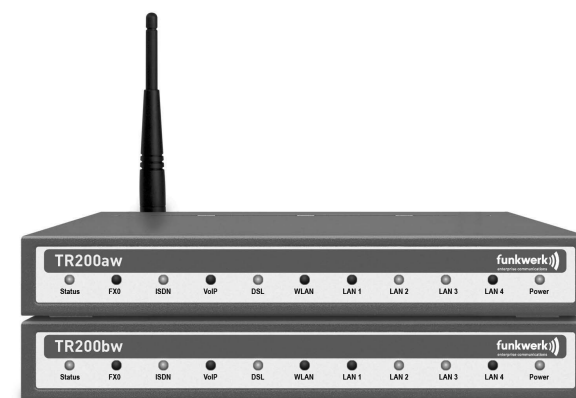

Operating instructions Funkwerk TR 200 aw/ bw

Making internal calls




Making external calls



Speed dialing from the PABX telephone directory




Defining your transmitted number for an outward



Suppressing transmission of your own number during an outward call




Enquiry Call



Broker's call



Three-party conference call



Accepting a waiting call



Refusing a waiting call




Picking up calls (Ringing on other phones in your group)



Picking up a call from the answering machine



Forwarding a call with prior notice



Forwarding a call without prior notice



Trunk group (ISDN or FXO)



Trunk group (SIP)



Configuring automatic call-back



Canceling automatic call-back




Setting up or deleting an internal Follow me



Enabling or inhibiting call waiting



Configuring call forwarding



Canceling call forwarding




Activating station guarding (do not disturb)




Deactivating station guarding



Entering and activating a direct call number



Activate/deactivate direct dial-in



Direktrufnummer (Rufnummer) löschen



Subject to modifications

Ausgabe 1

290807